

Quick Installation Guide

1

Unboxing The
Cardbox Packing
with due diligence

**2**

Take out the Monitor, and hold in hands firmly
and unscrew the screws at the
bottom of the Monitor

**3**


Pick up the MS Base, and take out your Tripod Quick Release Plate .
Tight the Quick Release Plate at the UNC threading (holes) given
at the bottom of the Base .

**4**

Pick up the MS Base and insert in the bottom slot of Monitor,
and tight both the screws.


**5**

Take Out Mirror Frame Gently and do not put your
hands on Mirror, kindly use the soft fabric to clean
and touch the mirror .

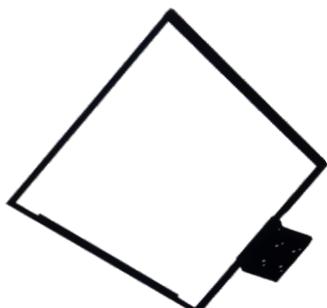

6

Pick up the Mirror Frame Gently and keep it on the TP Base channel right after the monitor on the available M5 four threads (Holdes), and tight the provided screws in the Toolkit with the help of Allen Key

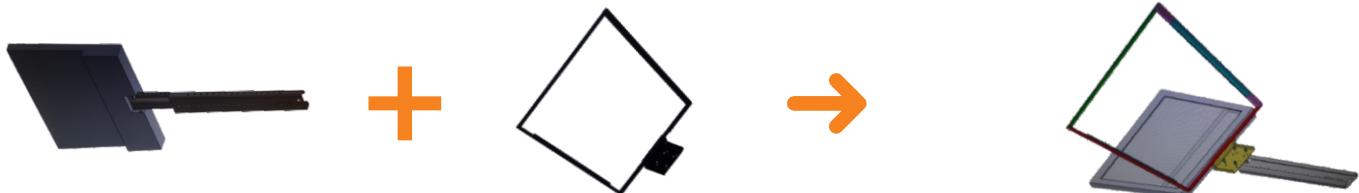**7**

Take out the Aluminum Assembly with Camera Plate on it and insert around the Base from backside , take out the wing screws/nut from toolkit and screw the Camera mount at desirable position as per the available Camera which need to be used .

**8**

Take out the Hood , and Put it along with wellcrow on Mirror Frame .

**9**

Pick up the Whole setup and insert the Quick Release Plate, back to the Tripod

**10**

mount your camera as soon and connect the Power Cable and HDMI Cable Coming from the laptop or desktop



Take out the dongle & Install the Software or if you don't get it, Please call the customer care number @ 8860807646 , 01141253956 mail us at @ customer.support@cronuspro.in