

QUICK INSTALLATION GUIDE

1

Unboxing The Cardbox
Packing with due Diligence



2



Take Out the Teleprompter Base

3



Pick Up the MS Base , and Take out the Tripod Quick Release Plate . Tight The Quick Release Plate at the UNC threading (holes) given at the bottom of the Base



4



5

Pickup the Monitor and Insert the Monitor in the Base Mounted on Tripod



6



Unscrew the Wing Screw from the Front Part of the Base , and Take out the two hole clip (Big one) , and Screw

7



Pick up the Clip , and insert in the Base (from where it was taken out) , insert the Wing screw from the Monitor Mounting Clip to the the clip inserted first and tighten screw as per the monitor position needed .

8


Take the Mirror to the upper side of the base , and mount at best possible position (Next to Monitor edge) , 4 no's of screws are already provided .



Take out the Mirror Frame Gently , and do not put your hands on the mirror .

Please use Allen Key to tighten the screw.

9

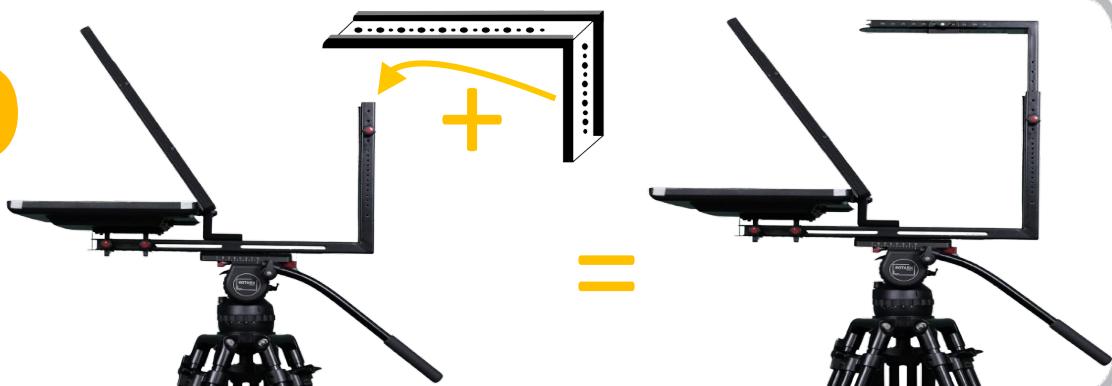

10


Get the Camera Mount provided , and add in the Top or the Bottom Mount , where PTZ camera need to be added with the UNC Screws provided .



OR



11

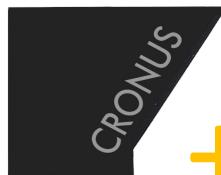

Take the Hood and put it on the mirror frame .For easy installation , ease the Bottom Welcrow and insert the hood from Top Camera Mount



12

Connect the Power Cable , & HDMI / SDI cable coming from Machine / Laptop from where the Script is running

to Install the Software or Call @
+91 1141253956 , +91
8860807646 . Use the Dongle or
Licence Key to Authorise the
Purchase

